www.dragino.com sales@dragino.com Direct: +86 755 86610829 |Fax: +86 755 86647123

Battery Calculator Guide for Dragino Product.

Dragino Battery powered product are all runs in Low Power mode. We have an update battery calculator which are base on the measurement of the real device. User can use this calculator to check the battery life and calculate the battery life if want to use different transmit interval.

Instruction to use as below:

Step 1: Downlink the up-to-date DRAGINO_Battery_Life_Prediction_Table.xlsx from: https://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/Battery_Analyze/

Step 2: Open it and choose

- Product Model
- Uplink Interval
- Working Mode

And the Life expectation in difference case will be shown on the right.

